




1 O-FORMATION CARRÉ 80

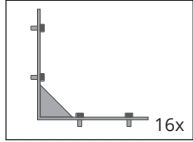

FK-0280 (1)

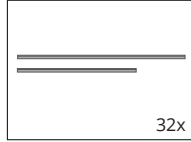

FK-0280 (2)




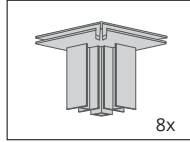


FK-0725






FK-0726

FK-0727





INSTALLING THE CORNERS

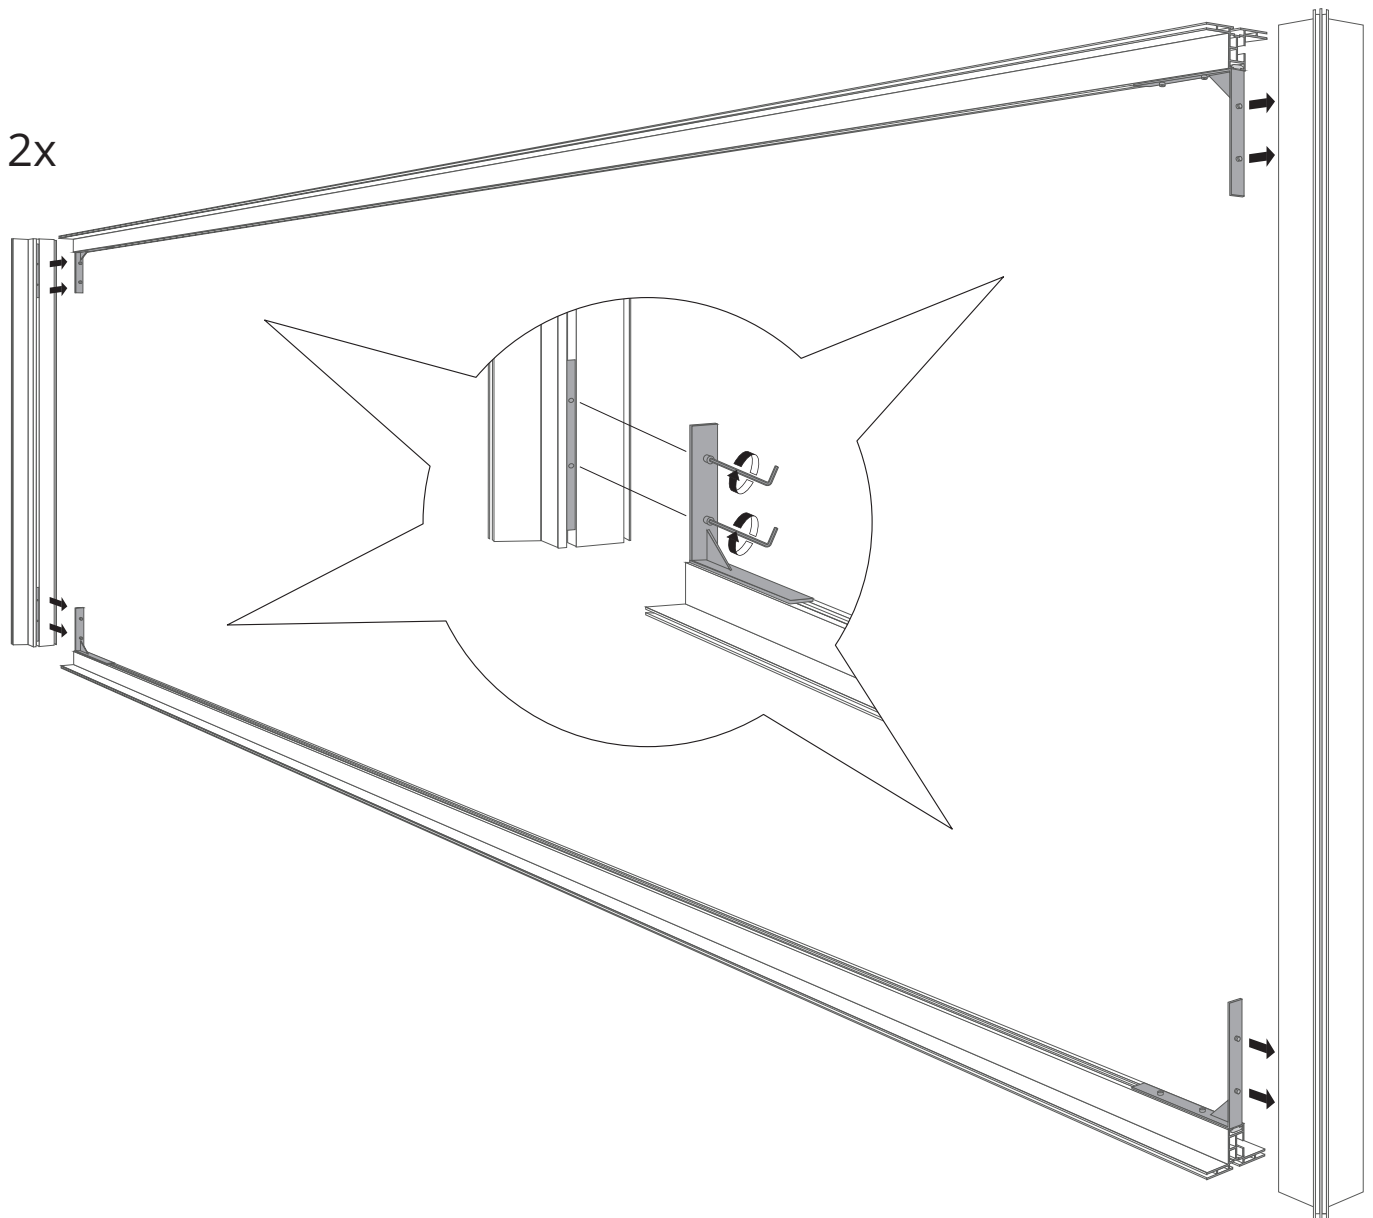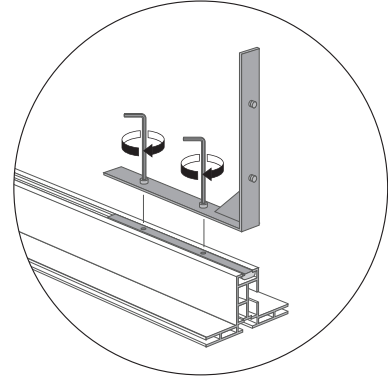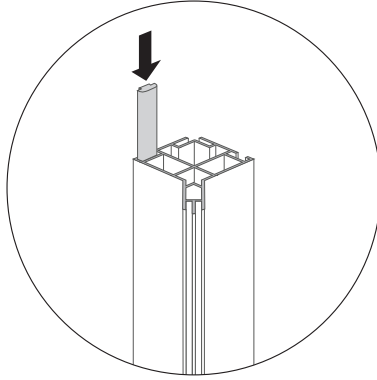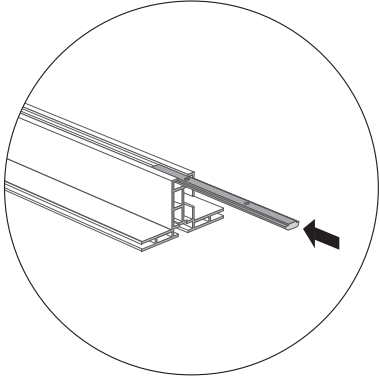


2

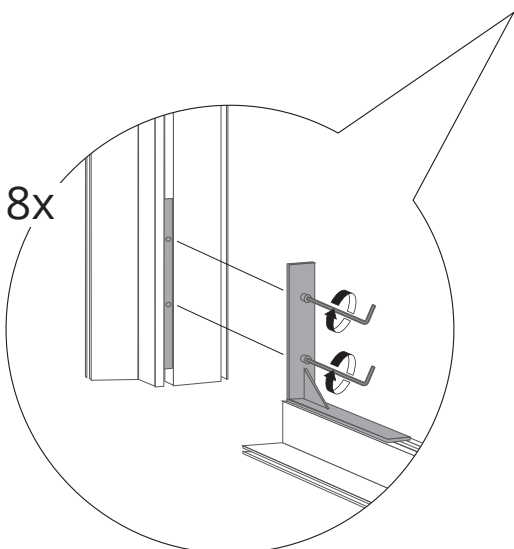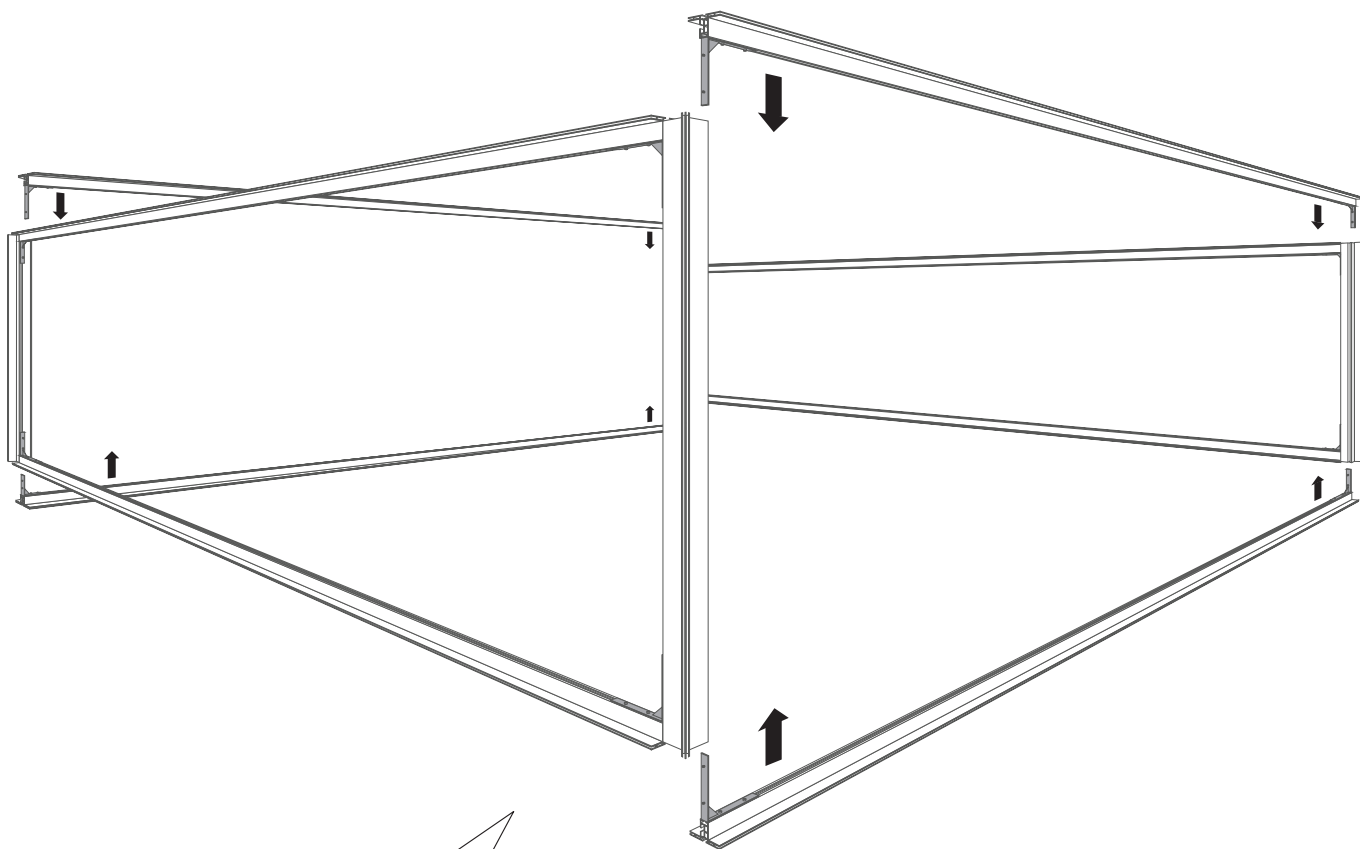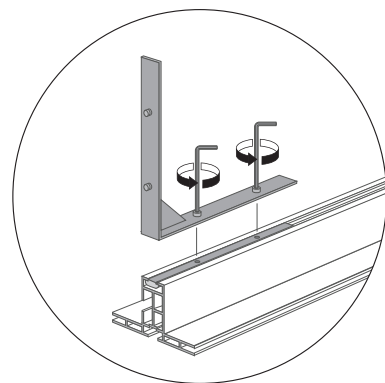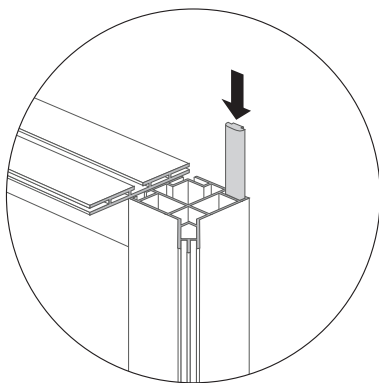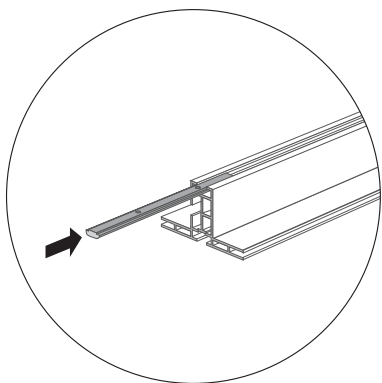


3

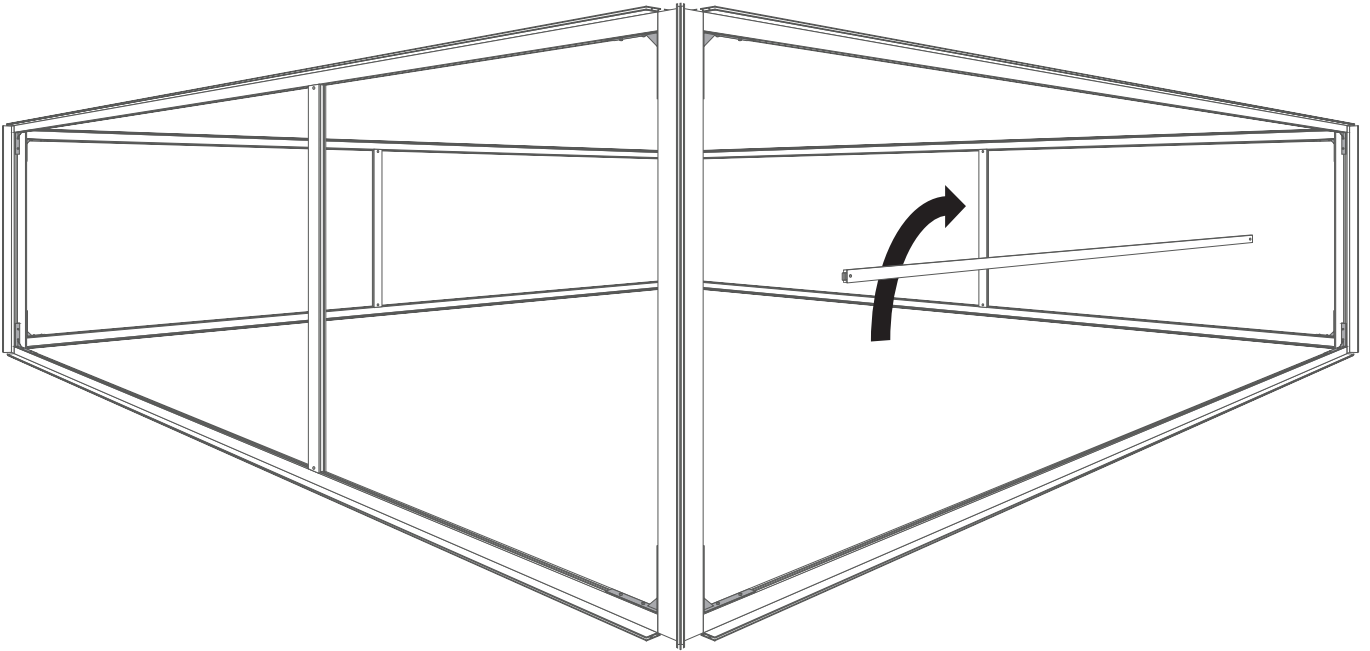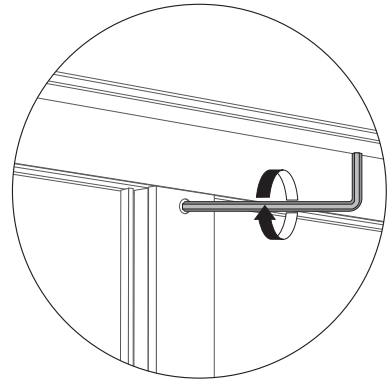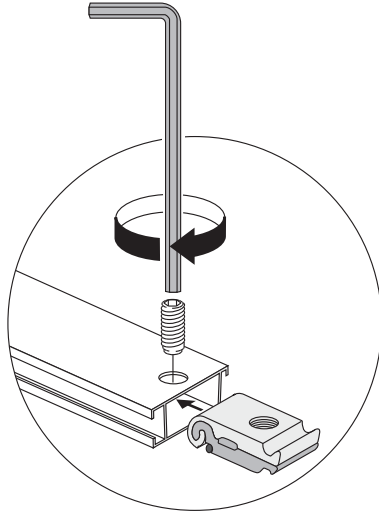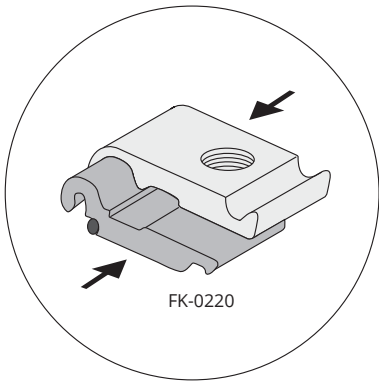


4

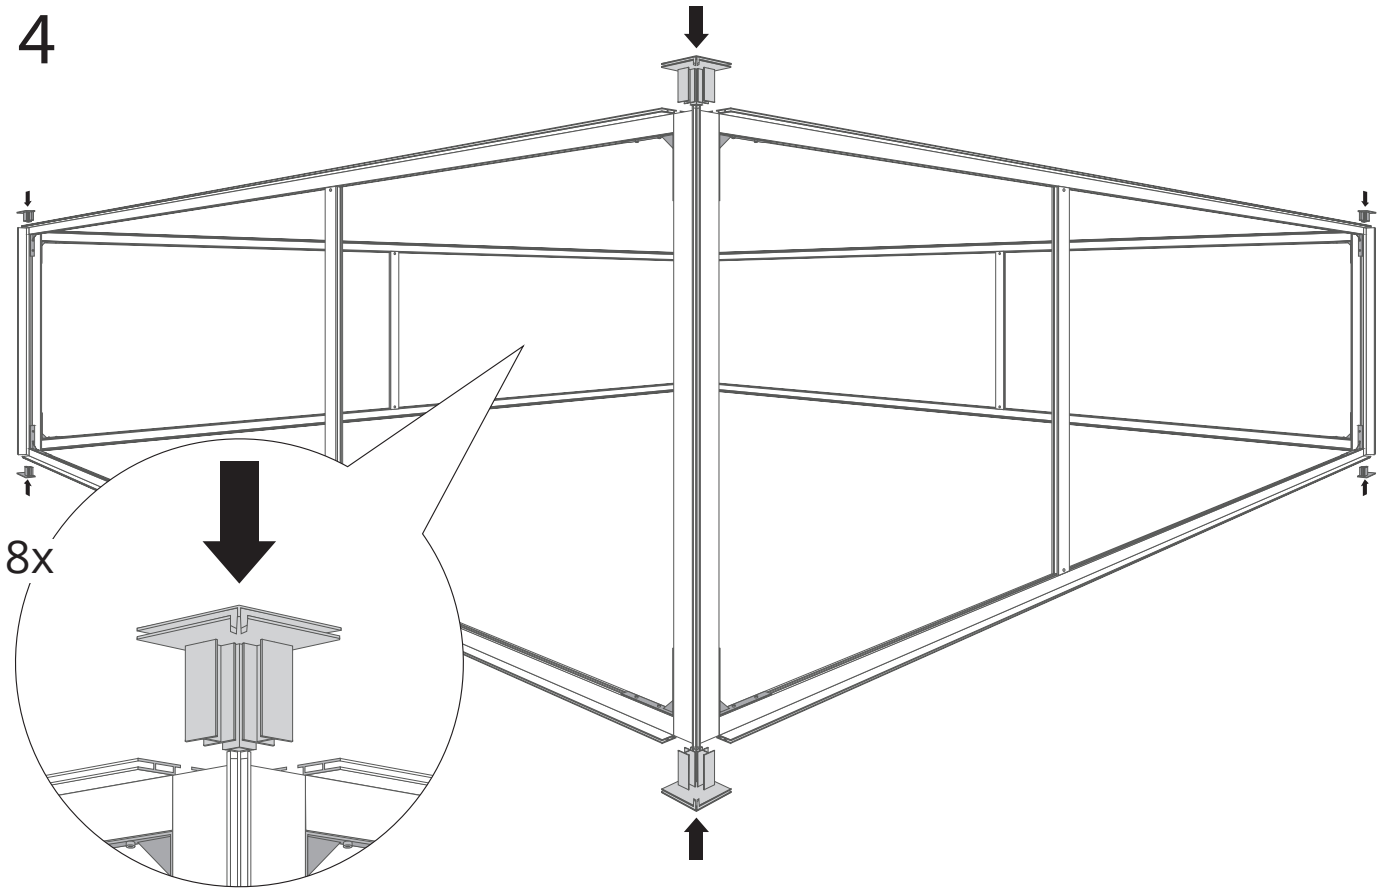


5

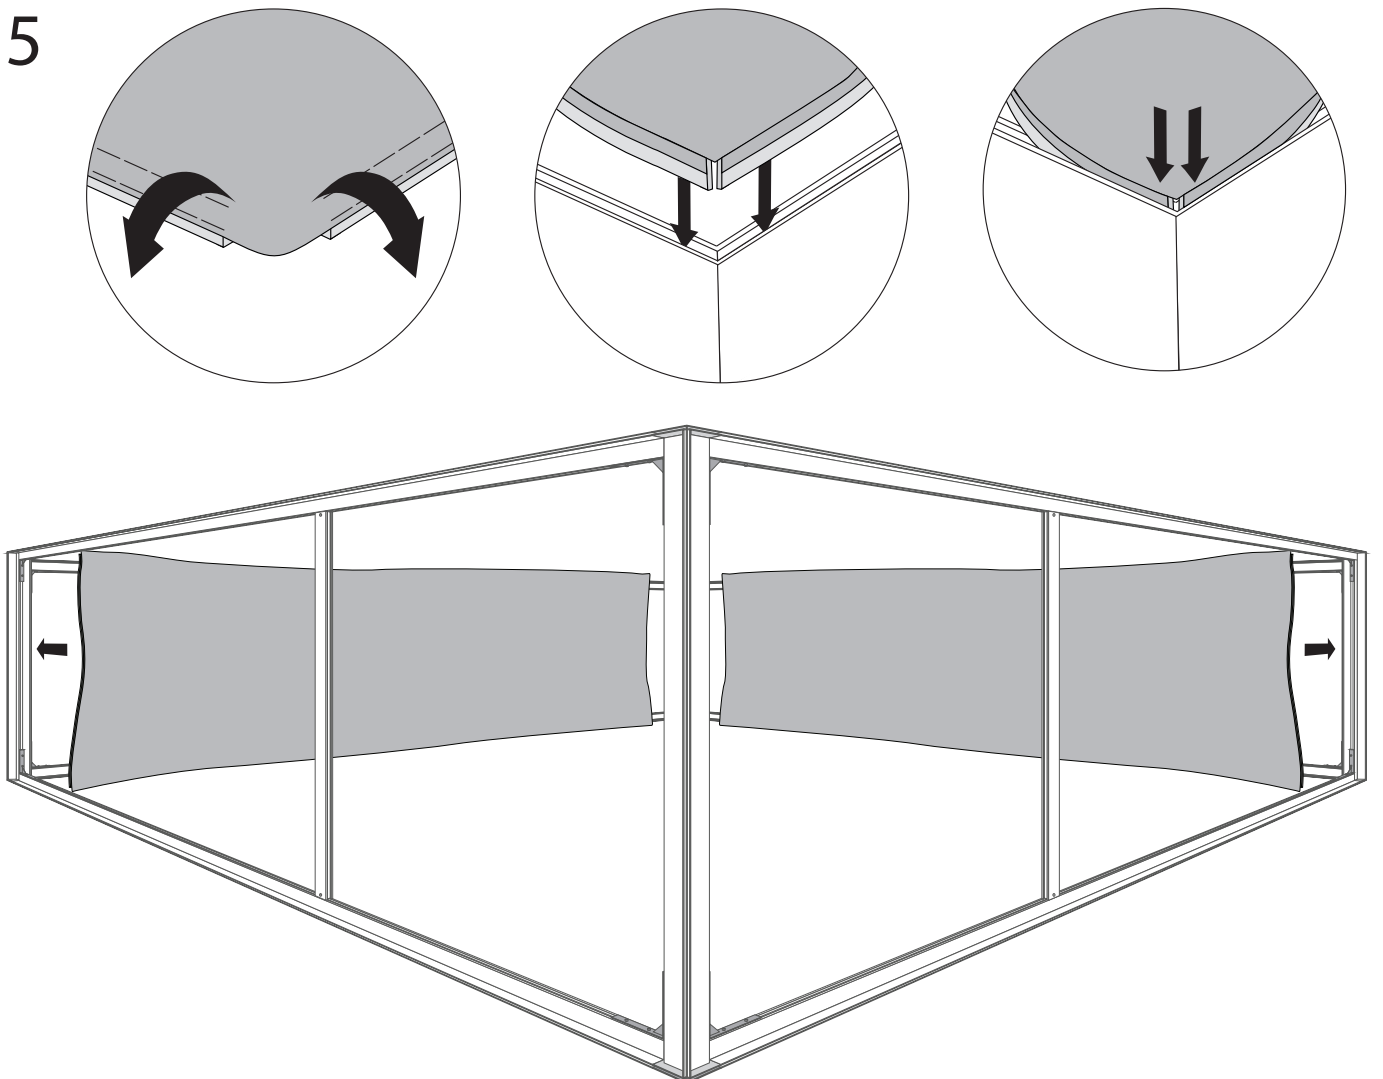


6

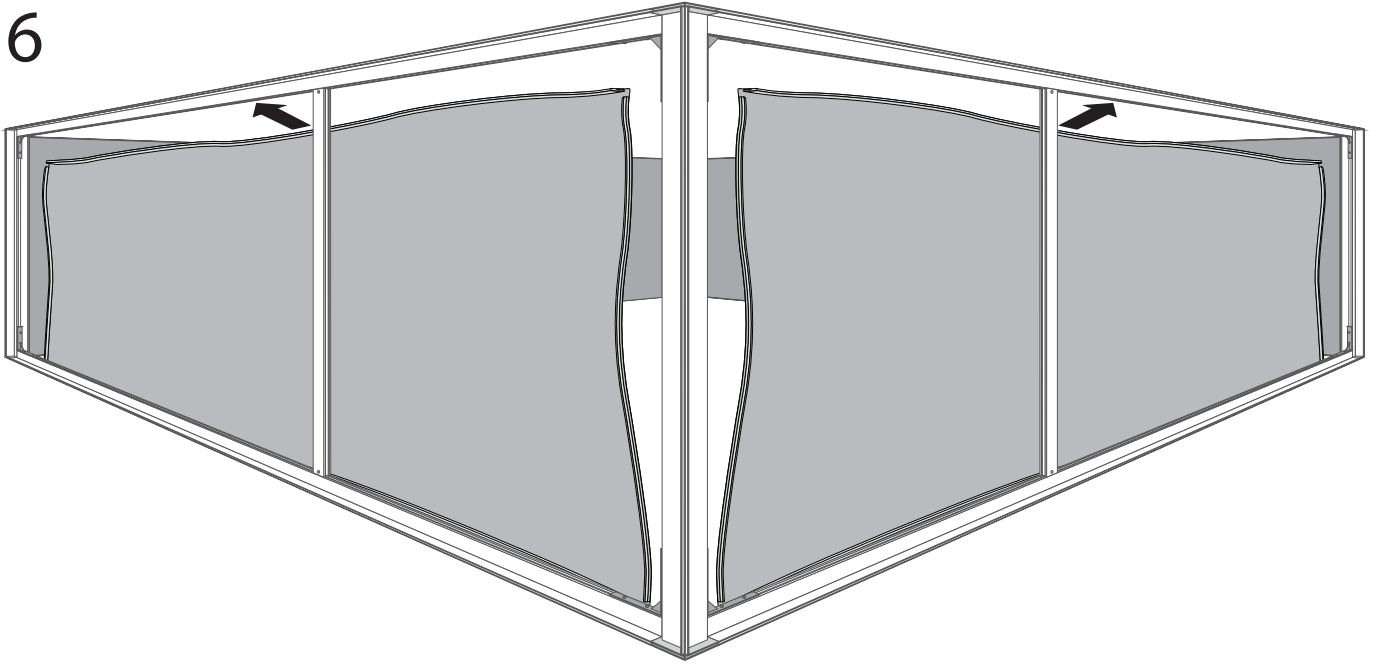

7

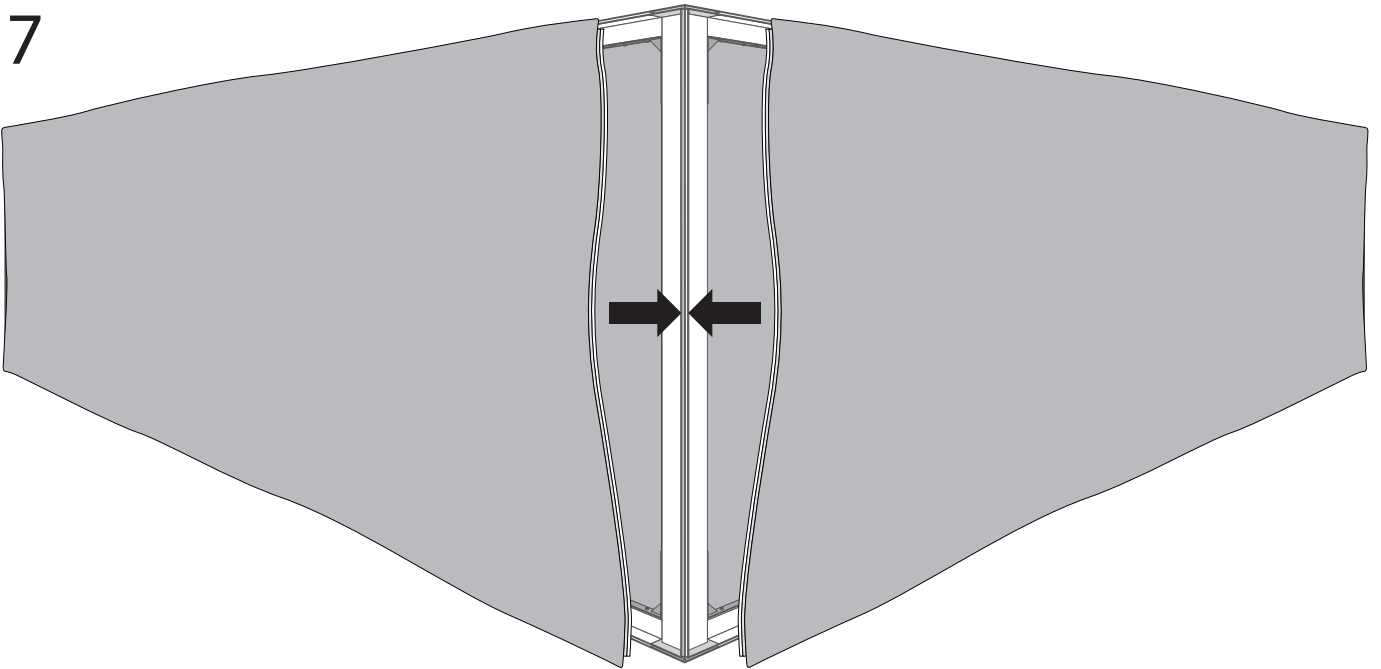

8

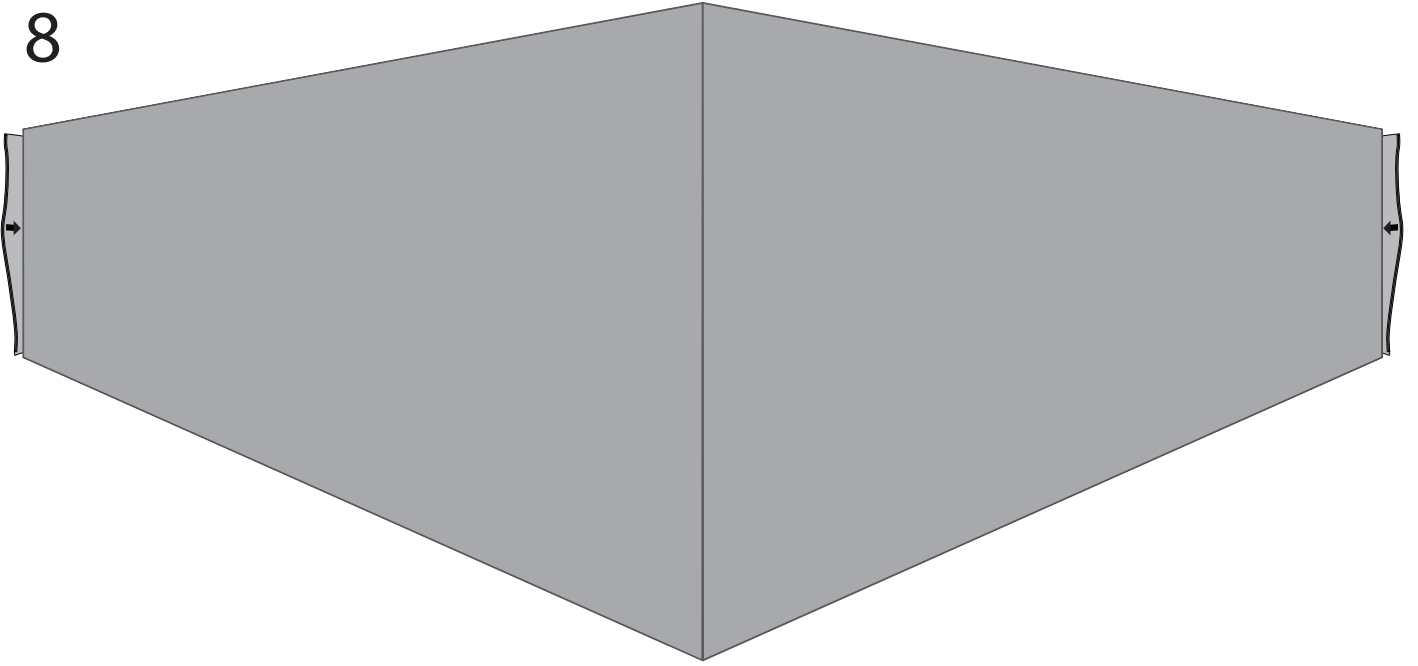

9

